


MP3 SPEAKER SET OWNER'S MANUAL

Customer Service Center
• N53 W24700 South Corporate Circle • Sussex, WI 53089
U.S.A.

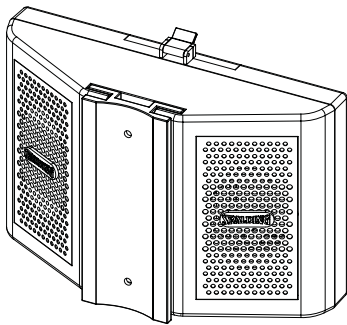

Adult Assembly Required.

This manual, accompanied by sales receipt, should be saved and kept on hand as a convenient reference, as it contains important information about your model.



WARNING!



READ AND UNDERSTAND
OPERATOR'S MANUAL
BEFORE USING THIS UNIT.

FAILURE TO FOLLOW
OPERATING
INSTRUCTIONS COULD
RESULT IN INJURY OR
DAMAGE TO PROPERTY.


REQUIRED TOOLS AND MATERIALS:



• 1 Capable Adult



• Safety Glasses



• Phillips-Head Screwdriver



• Portable Drill with
Torque Adjustment





• 5/16 or 8mm Socket

Write Model Number
From Box Here:




Open the battery compartments located on the back of the unit.
Insert 6 AA batteries (3 in each compartment).

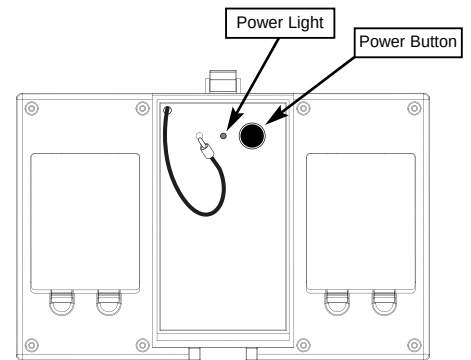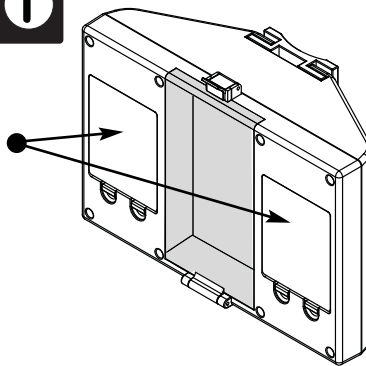


Placement:

SIDE VIEW


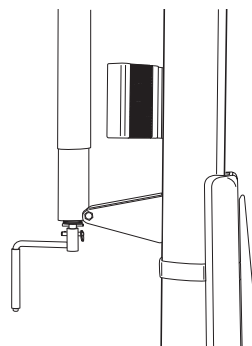


FRONT VIEW

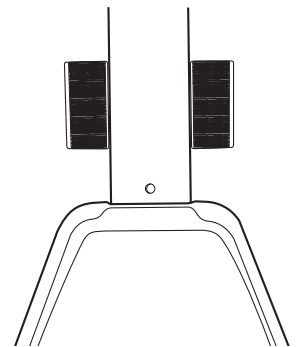

Attach bracket to pole with screws provided.


Attach the mounting bracket to the pole. The bracket is attached using the #12 x 1 self-drilling sheet-metal screws. The holes can be drilled with the screws themselves using a variable speed drill and a phillips bit. If that is not available the holes can be pre-drilled with the included drill bit.

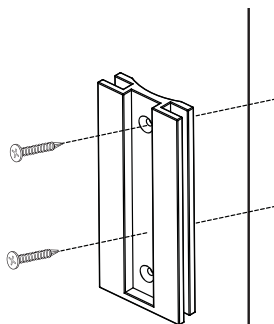

Toll-Free Customer Service Number for U.S: 1-800-558-5234,
For Canada: 1-800-284-8339,
For Europe: 00 800 555 85234 (Sweden: 009 555 85234),
For Australia: 1-800-632 792
Internet Address: www.huffysports.com www.spalding.com


4

Slide MP3 speaker set onto pole bracket.

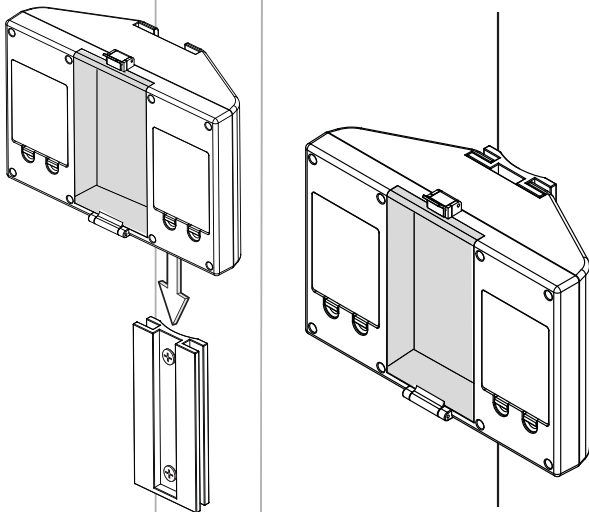

5

Insert your MP3 player into the speaker set by lifting the latch, swinging the door open and placing it inside the protected compartment.

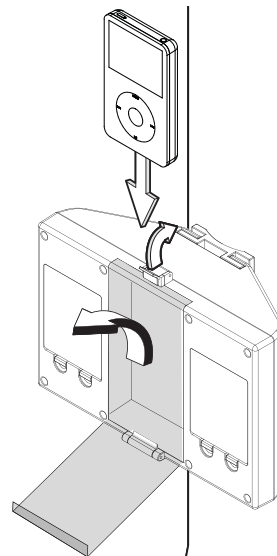



6

Plug the wire into the headphone jack of your MP3 player.

Turn volume on the MP3 player to a reasonable volume so not to damage speakers.

Press the power button on the speaker set so that the light illuminates

Press play on your MP3 player. Then, close the door.

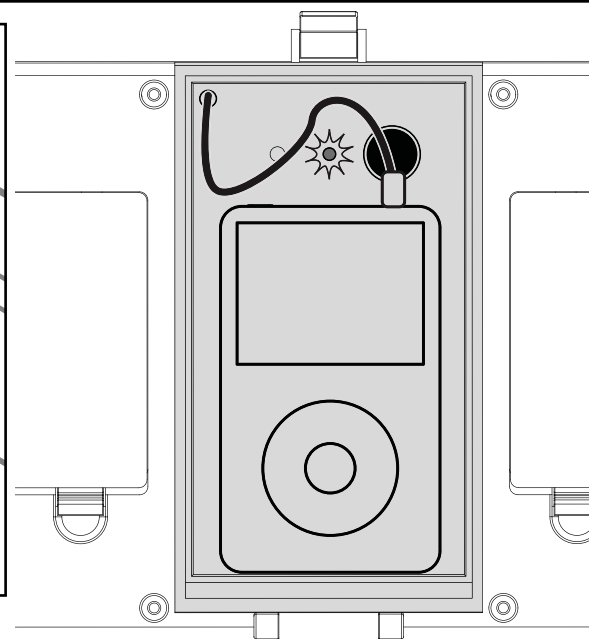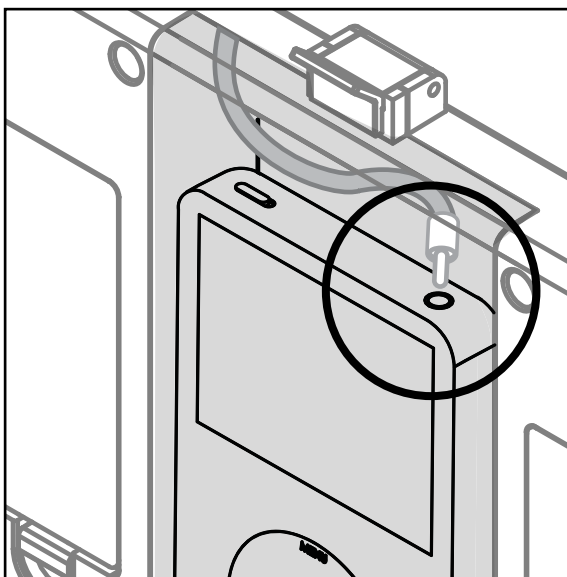

7

WARNING! Always power the speaker set "off" when not in use.

WARNING! For your protection do not leave the speaker set out in the weather conditions when not in use.

Safety precautions during handling of batteries.

When used correctly, batteries provide a safe and dependable source of power. However, if they are misused or abused, leakage or - in extreme cases - explosion and/or fire can result.
WARNING! - Battery Leakage
Leakage of battery acid can cause personal injury as well as damage to your MP3 speaker set. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery acid away from your eyes and mouth. Leaking batteries may make popping sounds.

Always follow warning and instructions.

Always follow battery warning and equipment instructions carefully. Always use the recommended battery.

Check the contact of both equipment and batteries for cleanliness. If necessary, clean with a damp cloth and then dry.

Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the equipment.

Batteries which are incorrectly inserted can overheat quickly. This can result in venting, leakage and/or explosion.

Immediately remove from the equipment and dispose of exhausted batteries.

When discharged batteries are kept in the equipment for a long time, leakage can occur, causing damage to the appliance.

Replace all batteries at the same time with new batteries of same system and manufacture.

When batteries of different kinds are used together, or new and old ones are used together, some batteries can be overdischarged due to a difference of voltage or capacity. This can result in venting and/or explosion.

Remove batteries from equipment if it is not to be used for an extended period of time.

Do not short-circuit batteries.

When the positive (+) and negative (-) terminals of a battery are in electrical contact with each other, the battery becomes short circuited. For example, loose batteries in a pocket with keys or coins, can be short circuited. This can result in venting and leakage.

Do not heat batteries.

When a battery is heated it can result in leakage and explosion.

Do not deform batteries.

Batteries shouldn't be crushed, punctured or otherwise damaged. This can result in venting, leakage and/or explosion.

Do not take batteries apart.

When a battery is taken apart, contact with the components can be harmful.

Do not directly solder batteries.

When a battery is directly soldered, it can be damaged by heat. This can cause internal short circuiting resulting in leakage, venting and possibly explosion.

Do not dispose of batteries in fire.

When batteries are disposed of in fire, the heat build-up can cause an explosion.

Do not charge batteries.

Attempting to charge a non-rechargeable battery can cause internal gas and/or heat generation resulting in venting, explosion and/or possibly fire.

Do not mix unpacked batteries.

When unpacked batteries are mixed together, they can easily short circuit each other, particularly button-type batteries. In some cases, it is very dangerous since batteries can heat up and cause an explosion.

Keep batteries out of the reach of children.

Do not allow children access to batteries. Keep all, especially small batteries that could be swallowed, out of their reach. In case a cell or battery has been swallowed, the person should seek medical assistance promptly.